


COMPETENCE B3011-4

Built-In Electric Oven

User information

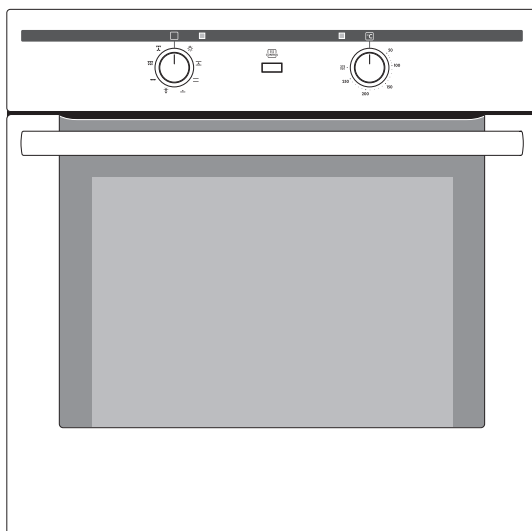

Dear customer,

Please read this User Information carefully and keep it to refer to at a later date.

Pass this User Information on to any subsequent owner of the appliance.

The following symbols are used in the text:



Safety instructions

Warning: Notes that concern your personal safety.

Attention: Notes that show how to avoid damage to the appliance.



Useful tips and hints



Environmental information

Contents

Operating Instructions	5
Safety instructions	5
Disposal	7
Description of the Appliance	8
General Overview.....	8
Control Panel	8
Oven Features.....	9
Oven accessories	9
Before Using for the first time	10
Initial Cleaning.....	10
Using the Oven	11
Switching the Oven On and Off.....	11
Oven Functions.....	12
Inserting the Oven Shelf and the Baking Tray	14
Uses, Tables and Tips	15
Baking.....	15
Baking table	17
Table for Bakes and Gratins.....	20
Frozen Ready Meals Table	20
Roasting	21
Roasting table.....	22
Grill Sizes	24
Grilling table.....	24
Defrosting.....	25
Defrosting table	25
Drying	26
Making Preserves.....	27
Cleaning and Care	29
Outside of the appliance.....	29
Oven Interior	29
Accessories	30
Shelf Support Rails	30
Oven Lighting.....	31
Oven door.....	32
Oven door glass	34
What to do if	37

Technical Data	38
Oven Interior Dimensions	38
Installation Instructions	39
Safety information for the installer.....	39
Guarantee/Customer Service	41
Service	43

Operating Instructions



Safety instructions

Electrical safety

- This appliance must be only connected by a **registered electrician**.
- In the event of a fault or damage to the appliance: Take the fuses out or switch off.
- **Repairs** to the appliance must only be carried out by **qualified service engineers**. Considerable danger may result from improper repairs. If repairs become necessary, please contact our Customer Services or your dealer.

Child Safety

- Never leave children unsupervised when the appliance is in use.

Safety whilst Using

- This appliance is intended to be used for cooking, roasting and baking food in the home.
- Take care when connecting electric appliances to sockets nearby. Do **not** allow connecting leads to come into contact with or to catch beneath the hot oven door.
- **Warning: Risk of burns!** The interior of the oven becomes hot during use.
- Using ingredients containing alcohol in the oven may create an alcohol-air mixture that is easily ignited. In this case, open the door carefully. Do not have embers, sparks or naked flames in the vicinity when opening the door.



Information on acrylamides

According to the latest scientific knowledge, intensive browning of food, especially in products containing starch, can constitute a health risk due to acrylamides. Therefore we recommend cooking at the lowest possible temperatures and not browning foods too much.

How to avoid damage to the appliance

- Do not line the oven with aluminium foil and do not place baking trays, pots, etc. on the oven floor, as the heat that builds up will damage the oven enamel.
- Fruit juices dripping from the baking tray will leave stains, which you will not be able to remove. For very moist cakes, use a deep tray.
- Do not put any strain on the oven door when open.
- Never pour water directly into the oven when it is hot. This could cause damage to or discoloration of the enamel.
- Rough handling, especially around the edges of the front panel, can cause the glass to break.
- Do not store any flammable materials inside the oven. These could ignite when the oven is switched on.
- Do not store any moist foods inside the oven. This could damage the oven enamel.



Note on enamel coating

Changes in the colour of the oven's enamel coating as a result of use do not affect the appliance's suitability for normal and correct use. They therefore do not constitute a defect in the sense of the warranty law.

Disposal




Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.



Old appliance

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.




Warning: So that the old appliance can no longer cause any danger, make it unusable before disposing of it.


To do this, disconnect the appliance from the mains supply and remove the mains cable from the appliance.

Description of the Appliance

General Overview

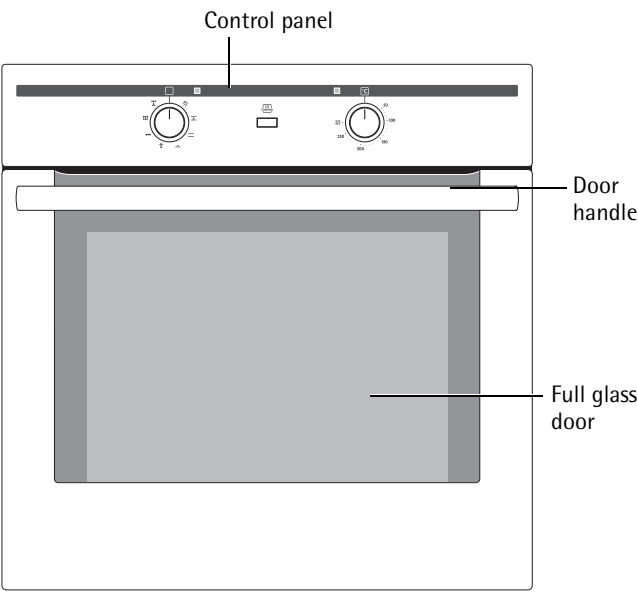


Control Panel

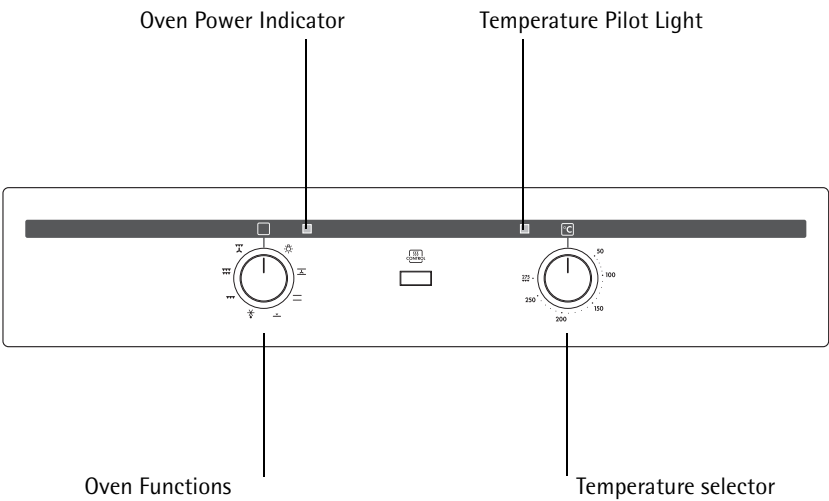

Oven Features


All interior oven walls, except the floor of the oven, are coated with a special enamel (catalytic coating).

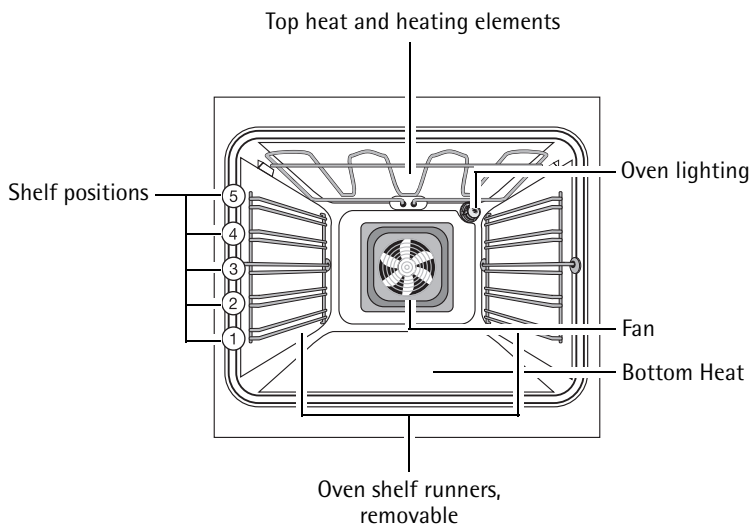

Oven accessories


Oven shelf

For cookware, cake tins, roasts and grilled foods.

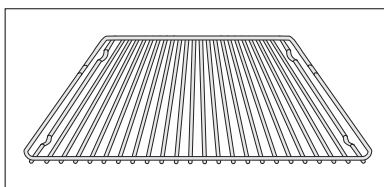

Baking tray

For cakes and biscuits.

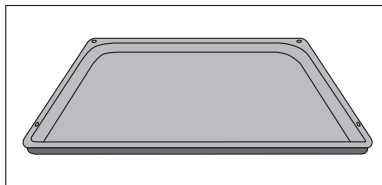

Before Using for the first time

Initial Cleaning

You should clean the oven before using it for the first time.




Caution: Do not use any caustic, abrasive cleaners! The surface could be damaged.



To clean the external parts of the oven, only use a cloth well wrung out with warm water to which a little washing up liquid has been added or a commercially available cleaner specifically designed for this purpose.

To prevent damaging the door or door glass, avoid the use of the following:


- Household detergent and bleaches
- Impregnated pads unsuitable for non-stick saucepans
- Brillo/Ajax pads or steel wool pads
- Chemical oven pads or aerosols
- Rust removers
- Bath/Sink stain removers

1. Turn the oven function switch to oven lighting .
2. Remove all accessories and the shelf support rails and wash them with warm water and washing up liquid.
3. Wash the floor of the oven in the same way using warm soapy water, and allow to dry.
4. Wipe the front of the appliance with a damp cloth.

Using the Oven

- i** The oven is equipped with **retractable buttons** for "Oven functions" and "Temperature selection". To use, press the relevant button. The button then sticks out.

Switching the Oven On and Off

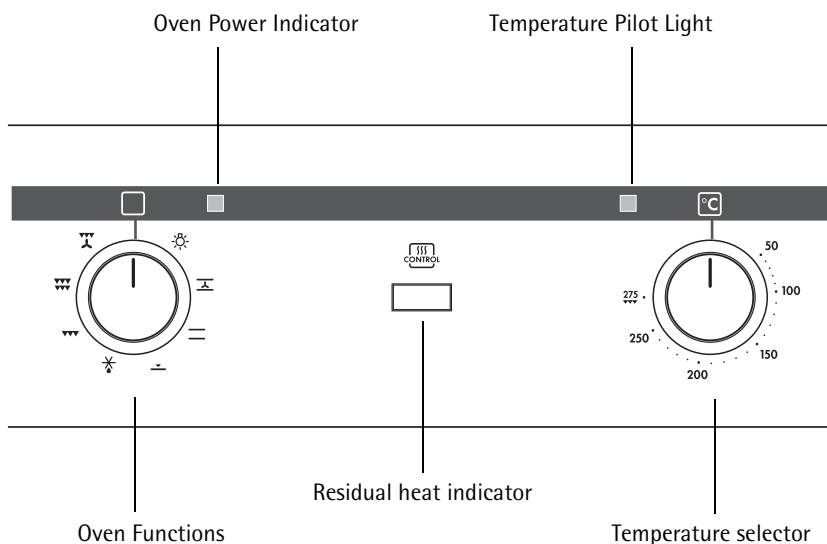


1. Turn the oven functions dial to the desired function.
2. Turn the temperature selector to the desired temperature.
The power indicator is lit as long as the oven is in operation.
The temperature pilot light is lit as long as the oven is heating up.
3. To turn the oven off, turn the oven functions dial and the temperature selector to the Off position.

- i** **Cooling fan**
The fan switches on automatically in order to keep the appliance's surfaces cool. When the oven is switched off, the fan continues to run to cool the appliance down, then switches itself off automatically.

Oven Functions


The oven has the following functions:

	Oven function	Application	Heating element/ fan
	Light	Using this function you can light up the oven interior, e.g. for cleaning.	---
	Fan-assisted circulation	For baking on up to two oven levels . Set the oven temperatures 20–40 °C lower than when using Conventional.	Top heat, bottom-heat, fan
	Conventional	For baking and roasting on one oven level .	Top heat, bottomheat
	Bottom heat	For baking cakes with crispy or crusty bases .	Bottom heat
	Defrost	For defrosting e. g. flans and gateaux, butter, bread, fruit or other frozen foods .	Fan
	Grill	For grilling flat foodstuffs placed in the middle of the grill and for toasting .	Grill
	Dual grill	For grilling flat foodstuffs in large quantities and for toasting .	Grill, top heat
	Rotitherm	For roasting larger joints of meat or poultry on one level. The function is also suitable for gratinating and browning .	Grill, top heat, fan

Gar Control







This function makes it possible to save energy by the deliberate use of residual heat.


After the oven is switched off, the Gar Control  indicator lights up. As long as the indicator is lit, the temperature in the oven is high enough to finish the cooking process.

After that the indicator goes out.



As a rule of thumb: With longer cooking times, the oven can be switched off approx. 10 mins. before the end of the cooking time.

The Gar Control  function can be used with the oven functions Fan-assisted circulation , Conventional  and Rotitherm .

The Gar Control  function can be usefully used if the oven has already been on for at least 30 mins. at a minimum temperature of 160°C.

Inserting the Oven Shelf and the Baking Tray




Shelf runner safety and anti-tip device

As a shelf runner safety device, all insertable components have a small curved indentation at the bottom on the right and left-hand edge. Always insert insertable components so that this indentation is at the back of the oven interior. This indentation is also important for preventing the insertable components from tipping.

Inserting the baking tray


Push the baking tray between the guide bars of the selected oven level.

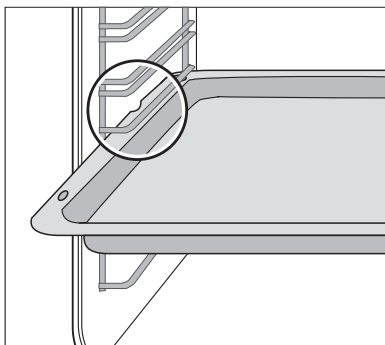

Inserting the oven shelf:

Insert the oven shelf so that the feet point downwards.

Push the oven shelf between the guide bars of the selected oven level.

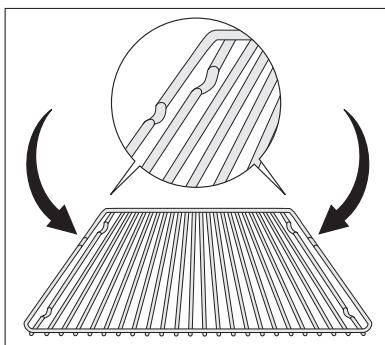


The high rim around the oven shelf is an additional device to prevent cookware from slipping.

Inserting the oven shelf and the baking tray together:

Lay the oven shelf on the baking tray.

Push the baking tray **between** the guide bars of the selected oven level.

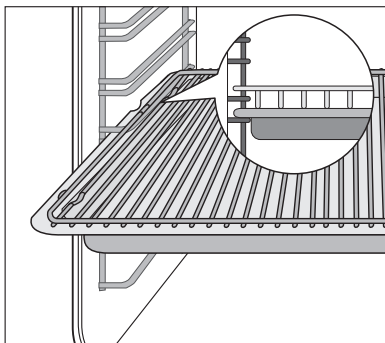



Uses, Tables and Tips



Baking

Oven function: Fan-assisted circulation  or Conventional 


Baking tins

- For Conventional , dark metal and non-stick tins are suitable.
- For Fan-assisted circulation  bright metal tins are also suitable.


Oven levels

- Baking with Conventional  is only possible on one level.
- With Fan-assisted circulation  you can bake dry cakes and biscuits on 2 baking trays at the same time.


1 baking tray:
e.g. oven level 3

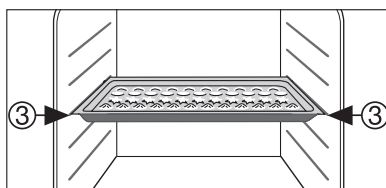

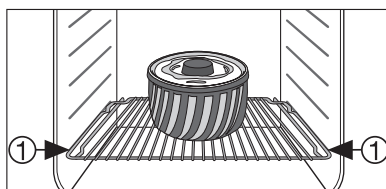

1 cake tin:
e.g. oven level 1

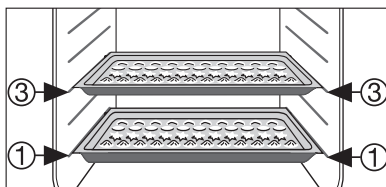

2 baking trays:
e. g. oven levels 1 and 3



General Instructions

- Insert the tray with the bevel at the front.
- With Conventional  or Fan-assisted circulation  you can also bake with two tins next to one another on the oven shelf at the same time. This does not significantly increase baking time.



When frozen foods are used the trays inserted may distort during cooking. This is due to the large difference in temperature between the freezing temperature and the temperature in the oven. Once the trays have cooled the distortion will disappear again.

How to use the Baking Tables

The tables give the required temperature settings, baking times and oven shelf levels for a selection of typical dishes.

















 

- Temperatures and baking times are for guidance only, as these will depend on the consistency of pastry or mixture, the number and the type of cake tin.
- We recommend using the lower temperature the first time and then if necessary, for example, if a deeper browning is required, or baking time is too long, selecting a higher temperature.
- If you cannot find the settings for a particular recipe, look for the one that is most similar.
- If baking cakes on baking trays or in tins on more than one level, baking time can be extended by 10-15 minutes.
- Moist recipes (for example, pizzas, fruit flans, etc.) are baked on one level.
- Cakes and pastries at different heights may brown at an uneven rate at first. If this occurs, **please do not change the temperature setting**. Different rates of browning even out as baking progresses.









 
 
 





 
 








With longer baking times, you can switch the oven off about 10 minutes before the end of the baking time, in order to utilise the residual heat.

Unless otherwise stated, the values given in the tables assume that cooking is started with the oven cold.

Baking table

Type of baking		Ovenfunction	Shelf position	Temperature °C	Time Hours mins.
Baking in tins					
Ring cake or brioche		Fan-assisted circulation	1	150-160	0:50-1:10
Madeira cake/Fruitcakes		Fan-assisted circulation	1	140-160	1:10-1:30
Sponge cake		Fan-assisted circulation	1	140	0:25-0:40
Sponge cake		Conventional	1	160	0:25-0:40
Flan base - short pastry		Conventional	3	180-200	0:10-0:25
Flan base - sponge mixture		Fan-assisted circulation	3	150-170	0:20-0:25
Apple pie		Conventional	1	170-190	0:50-1:00
Apple pie (2 tins Ø20cm, diagonally off set)		Fan-assisted circulation	1	160	1:10-1:30
Apple pie (2 tins Ø20cm, diagonally off set)		Conventional	1	180	1:10-1:30
Savoury flan (e. g. quiche lorraine)		Conventional	1	180-200	0:30-1:10
Cheesecake		Conventional	1	170-190	1:00-1:30
Cakes/pastries/breads on baking trays					
Plaited bread/bread crown		Conventional	3	170-190	0:30-0:40
Christmas stollen		Conventional	3	160-180 ¹⁾	0:40-1:00
Bread (rye bread) -first of all -then		Conventional	1	250 ¹⁾ 160-180	0:20 0:30-1:00
Cream puffs/Eclairs		Fan-assisted circulation	3	160-170 ¹⁾	0:15-0:30
Swiss roll		Conventional	3	180-200 ¹⁾	0:10-0:20
Cake with crumble topping(dry)		Fan-assisted circulation	3	150-160	0:20-0:40
Buttered almond cake/sugar cakes		Conventional	3	190-210 ¹⁾	0:15-0:30

Type of baking		Ovenfunction	Shelf position	Temperature °C	Time Hours mins.
Fruit flans (made with yeast dough/sponge mixture) ²⁾		Fan-assisted circulation	3	150	0:35-0:50
Fruit flans (made with yeast dough/sponge mixture)		Conventional	3	170	0:35-0:50
Fruit flans made with short pastry		Conventional	3	170-190	0:40-1:20
Yeast cakes with delicate toppings (e. g. quark, cream, vanilla cream)		Conventional	3	160-180	0:40-1:20
Pizza (with a lot of topping) ²⁾		Conventional	1	190-210 ¹⁾	0:30-1:00
Pizza (thin crust)		Conventional	1	230-250 ¹⁾	0:10-0:25
Unleavened bread		Conventional	1	250-270	0:08-0:15
Tarts (CH)		Conventional	1	200-220	0:35-0:50
Biscuits					
Short pastry biscuits		Fan-assisted circulation	3	150-160	0:06-0:20
Short pastry biscuits		Fan-assisted circulation	1 / 3	150-160	0:06-0:20
Viennese whirls		Fan-assisted circulation	3	140	0:20-0:30
Viennese whirls		Fan-assisted circulation	1 / 3	140	0:25-0:40
Viennese whirls		Conventional	3	160 ¹⁾	0:20-0:30
Biscuits made with sponge mixture		Fan-assisted circulation	3	150-160	0:15-0:20
Biscuits made with sponge mixture		Fan-assisted circulation	1 / 3	150-160	0:15-0:20
Pastries made with egg white, meringues		Fan-assisted circulation	3	80-100	2:00-2:30
Macaroons		Fan-assisted circulation	3	100-120	0:30-0:60
Biscuits made with yeast dough		Fan-assisted circulation	3	150-160	0:20-0:40
Puff pastries		Fan-assisted circulation	3	170-180 ¹⁾	0:20-0:30

Type of baking	Ovenfunction	Shelf position	Temperature °C	Time Hours mins.
Rolls	 Fan-assisted circulation	3	160 ¹⁾	0:20-0:35
Rolls	 Conventional	3	180 ¹⁾	0:20-0:35
Small cakes (20 per tray)	 Fan-assisted circulation	3	140 ¹⁾	0:20-0:30
Small cakes (20 per tray)	 Fan-assisted circulation	1 / 4	140 ¹⁾	0:25-0:40
Small cakes (20 per tray)	 Conventional	3	170 ¹⁾	0:20-0:30








1) Pre-heat the oven

2) Use the drip tray or roasting tray

Tips on baking


 


Baking results	Possible cause	Remedy
The cake is not browned enough at the bottom	Wrong oven level	Place cake lower in the oven
The cake sinks (becomes soggy, lumpy, streaky)	Oven temperature too high	Use a slightly lower setting
	Baking time too short	Set a longer baking time Baking times cannot be reduced by setting higher temperatures
	Too much liquid in the mixture	Use less liquid Pay attention to mixing times, especially if using mixing machines
Cake is too dry	Oven temperature too low	Set oven temperature higher
	Baking time too long	Set a shorter baking time
Cake browns unevenly	Oven temperature too high and baking time too short	Set a lower oven temperature and a longer baking time
	Mixture is unevenly distributed	Spread the mixture evenly on the baking tray
Cake is not done within the baking time given	Temperature too low	Use a slightly higher oven setting

Table for Bakes and Gratins

Dish		Oven function	Shelf position	Temperature °C	Time Hours mins.
Pasta bake		Conventional	1	180-200	0:45-1:00
Lasagne		Conventional	1	180-200	0:25-0:40
Vegetables au gratin ¹⁾		Rotitherm	1	160-170	0:15-0:30
Baguettes topped with melted cheese ¹⁾		Rotitherm	1	160-170	0:15-0:30
Sweet bakes		Conventional	1	180-200	0:40-0:60
Fish bakes		Conventional	1	180-200	0:30-1:00
Stuffed vegetables		Rotitherm	1	160-170	0:30-1:00

1) Pre-heat the oven

Frozen Ready Meals Table

Food to be cooked		Oven function	Shelf position	Temperature °C	Time
Frozen pizza		Conventional	3	as per manufacturer's instructions	as per manufacturer's instructions
Chips ¹⁾ (300-600 g)		Rotitherm	3	200-220	15-25 mins.
Baguettes		Conventional	3	as per manufacturer's instructions	as per manufacturer's instructions
Fruit flans		Conventional	3	as per manufacturer's instructions	as per manufacturer's instructions

1) Comments: Turn chips 2 or 3 times during cooking

Roasting

Oven function: Conventional  or Rotitherm 

Roasting dishes

- Any heat-resistant ovenware is suitable to use for roasting (please read the manufacturer's instructions).
- Large roasting joints can be roasted **directly in the roasting tray or on the oven shelf with the roasting tray placed below it.**
- For all lean meats, we recommend **roasting these in a roasting tin with a lid.** This will keep the meat more succulent.
- All types of meat, that can be browned or have crackling, can be roasted in the **roasting tin without the lid.**

























Tips on using the roasting chart

The information given in the following table is for guidance only.

- We recommend cooking meat and fish **weighing 1 kg and above in the oven.**
- To prevent escaping meat juices or fat from burning on to the pan, we recommend placing some liquid in the roasting pan.
- If required, turn the roast (after 1/2 - 2/3 of the cooking time).
- Baste large roasts and poultry with their juices several times during roasting. This will give better roasting results.
- You can switch the oven off about 10 minutes before the end of the roasting time, in order to utilise the residual heat.

Roasting table

Type of meat	Quantity	Ovenfunction	Shelf position	Temperature °C	Time Hours mins.	
Beef						
Pot roast	1-1.5 kg		Conventional	1	200-250	2:00-2:30
Roast beef or fillet						per cm. of thickness
- rare	per cm. of thickness		Rotitherm	1	190-200 ¹⁾	0:05-0:06
- medium	per cm. of thickness		Rotitherm	1	180-190	0:06-0:08
- well done	per cm. of thickness		Rotitherm	1	170-180	0:08-0:10
Pork						
Shoulder, neck, ham joint	1-1.5 kg		Rotitherm	1	160-180	1:30-2:00
Chop, spare rib	1-1.5 kg		Rotitherm	1	170-180	1:00-1:30
Meat loaf	750 g-1 kg		Rotitherm	1	160-170	0:45-1:00
Porkknuckle (pre-cooked)	750 g-1 kg		Rotitherm	1	150-170	1:30-2:00
Veal						
Roast veal	1 kg		Rotitherm	1	160-180	1:30-2:00
Knuckle of veal	1.5-2 kg		Rotitherm	1	160-180	2:00-2:30
Lamb						
Leg of lamb, roast lamb	1-1.5 kg		Rotitherm	1	150-170	1:15-2:00
Saddle of lamb	1-1.5 kg		Rotitherm	1	160-180	1:00-1:30
Game						
Saddle of hare, leg of hare	up to 1 kg		Conventional	3	220-250 ¹⁾	0:25-0:40
Saddle of venison	1.5-2 kg		Conventional	1	210-220	1:15-1:45
Haunch of venison	1.5-2 kg		Conventional	1	200-210	1:30-2:15

Type of meat	Quantity	Ovenfunction	Shelf position	Temperature °C	Time Hours mins.	
Poultry						
Poultry portions	200-250g each		Rotitherm	1	200-220	0:35-0:50
Half chicken	400-500g each		Rotitherm	1	190-210	0:35-0:50
Chicken, poulard	1-1.5 kg		Rotitherm	1	190-210	0:45-1:15
Duck	1.5-2 kg		Rotitherm	1	180-200	1:15-1:45
Goose	3.5-5 kg		Rotitherm	1	160-180	2:30-3:30
Turkey	2.5-3.5 kg		Rotitherm	1	160-180	1:45-2:30
	4-6 kg		Rotitherm	1	140-160	2:30-4:00
Fish (steamed)						
Whole fish	1-1.5 kg		Conventional	1	210-220	0:45-1:15

1) Pre-heat the oven

Grill Sizes

Oven function: Grill  or Dual grill  with maximum temperature setting



Important: Always grill with the oven door closed.



The empty oven should **always be pre-heated with the grill functions for 5 minutes.**


- For grilling, place the **shelf** in the **recommended shelf position**.
- Always insert the **tray for collecting the fat** into the **first shelf position** from the bottom.
- The grilling times are guidelines.
- Grilling is particularly suitable for flat pieces of meat or fish.

Grilling table

Food to be grilled	Oven level	Grilling time	
		1st side	2nd side
Burgers	4	8-10 mins.	6-8 mins.
Pork fillet	4	10-12 mins.	6-10 mins.
Sausages	4	8-10 mins.	6-8 mins.
Fillet steaks, veal steaks	4	6-7 mins.	5-6 mins.
Fillet of beef, roast beef (approx. 1 kg)	3	10-12 mins.	10-12 mins.
Toast ¹⁾	3	4-6 mins.	3-5 mins.
Toast with topping	3	6-8 mins.	---

1) Do not pre-heat

Defrosting

Oven function: Defrost  (no temperature setting)

- Unwrap the food and place it on a plate on the oven shelf.
- Do not cover with a plate or bowl, as these can substantially lengthen the defrosting time.
- For defrosting, place the shelf in the **1st oven level from the bottom**.

Defrosting table

Dish	Defrosting time mins.	Further defrosting time (mins.)	Comments
Chicken, 1000 g	100-140	20-30	Place the chicken on an upturned saucer placed on a large plate Turn halfway through
Meat, 1000 g	100-140	20-30	Turn halfway through
Meat, 500 g	90-120	20-30	Turn halfway through
Trout, 150g	25-35	10-15	---
Strawberries, 300g	30-40	10-20	---
Butter, 250g	30-40	10-15	---
Cream, 2 x 200g	80-100	10-15	Cream can also be whipped when still slightly frozen in places
Gateau, 1400g	60	60	---

Drying

Oven function: Fan-assisted circulation

- Use oven shelves covered with greaseproof paper or baking parchment.
- You get a better result if you switch the oven off halfway through the drying time, open the door and leave the oven to cool down overnight.
- After this finish drying the food to be dried.

Food to be dried	Temperature in °C	Oven level		Time in hours (Guideline)
		1 level	2 levels	
Vegetables				
Beans	60-70	3	1 / 4	6-8
Peppers (strips)	60-70	3	1 / 4	5-6
Vegetables for soup	60-70	3	1 / 4	5-6
Mushrooms	50-60	3	1 / 4	6-8
Herbs	40-50	3	1 / 4	2-3
Fruit				
Plums	60-70	3	1 / 4	8-10
Apricots	60-70	3	1 / 4	8-10
Apple slices	60-70	3	1 / 4	6-8
Pears	60-70	3	1 / 4	6-9

Making Preserves

Oven function: Bottom heat 

- For preserving, use only commercially available preserve jars of the same size.
- **Jars with twist-off or bayonet type lids and metal tins are not suitable.**
- When making preserves, the **first shelf position from the bottom** is the one most used.
- Use the shelf for making preserves. There is enough room on this for up to six 1-litre preserving jars.
- The jars should all be filled to the same level and clamped shut.
- Place the jars on the baking tray in such a way that they are not touching each other.
- Pour approx. 1/2 litre of water into the baking tray so that sufficient moisture is produced in the oven.
- As soon as the liquid starts to pearl in the first jars (after about 35-60 minutes with 1 litre jars), switch the oven off or reduce the temperature to 100°C (see table).

Preserves table

The times and temperatures for making preserves are for guidance only.

Preserve	Temperature in °C	Cooking time until simmering in mins.	Continue to cook at 100°C in mins.
Soft fruit			
Strawberries, blueberries, raspberries, ripe gooseberries	160-170	35-45	---
Unripe gooseberries	160-170	35-45	10-15
Stone fruit			
Pears, quinces, plums	160-170	35-45	10-15
Vegetables			
Carrots ¹⁾	160-170	50-60	5-10
Mushrooms ¹⁾	160-170	40-60	10-15
Cucumbers	160-170	50-60	---
Mixed pickles	160-170	50-60	15
Kohlrabi, peas, asparagus	160-170	50-60	15-20
Beans	160-170	50-60	---

1) Leave standing in oven when switched off

Cleaning and Care



Warning: For cleaning, the appliance must be switched off and cooled down.

Warning: For safety reasons, **do not** clean the appliance with steam jet or high-pressure cleaning equipment.

Attention: **Do not use any scouring agents, sharp cleaning tools or scourers.**

Outside of the appliance

- Wipe the front of the appliance with a soft cloth and warm water and washing up liquid.
- For metal fronts, use normal commercially available cleaning agents.

Oven Interior

Oven lighting

You can switch on the oven light to make cleaning easier.

Cleaning

The walls that have a catalytic coating are self-cleaning. They absorb splashes of fat while the oven is in use.

To support this self-cleaning process, we recommend heating the oven without any food at regular intervals.

1. Remove all slide-in items from the oven.
2. Wash the oven floor with warm water and washing up liquid, then dry it.
3. Set the oven temperature to 250 °C.
4. Switch the oven off after one hour.
5. Wipe off any remaining soiling with a **soft** damp sponge.



Important! Do not use oven sprays or abrasive cleaners. Do not use soap or other cleaning agents. Doing so can damage the catalytic surface.



Over time the catalytic coating can discolour slightly. This does not affect its catalytic properties.

Accessories



Wash all slide-in units (shelf unit, baking tray, shelf support rails etc.) after each use and dry well. Soak briefly to make them easier to clean.

Shelf Support Rails

The shelf support rails on the left and right hand sides of the oven can be removed for cleaning the side walls.

Removing the shelf support rails


First pull the front of the rail away from the oven wall (1) and then un-hitch at the back (2).

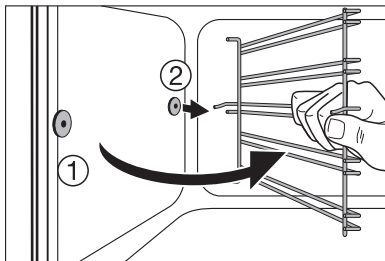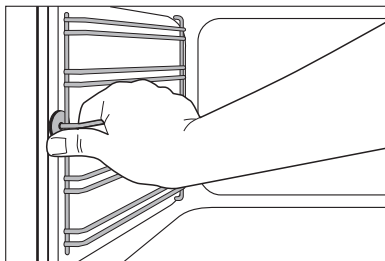


Fitting the shelf support rails



Important! The rounded ends of the guide rails must be pointing forwards!

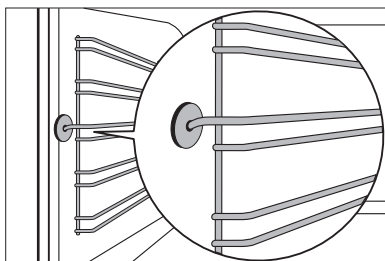

To re-insert, first hook the rail into place at the back (1) and then insert the front and press into place (2).

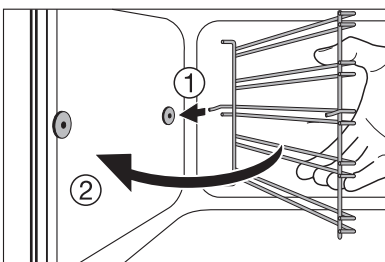

Oven Lighting



Warning: Risk of electric shock! Prior to changing the oven light bulb:


- Switch off the oven!
- Disconnect from the electricity supply.



Place a cloth on the oven floor to protect the oven light and glass cover.

Changing the oven light bulb/ cleaning the glass cover

1. Remove the glass cover by turning it anti-clockwise and then clean it.
2. If necessary: replace with **25 watt, 230 V, 300 °C heat-resistant oven lighting.**
3. Refit the glass cover.

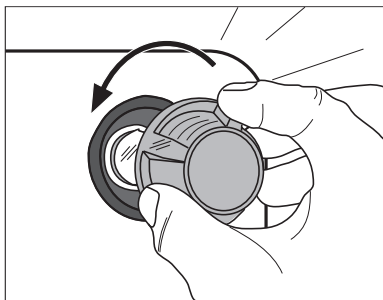


Oven door


For easier cleaning of the oven interior the oven door of your appliance can be taken off its hinges.

Removing the oven door from its hinges


1. Open the oven door as far as it will go.

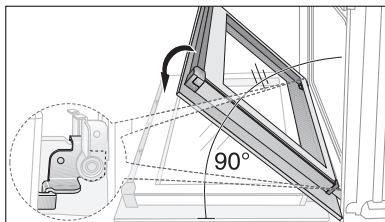


2. Undo the **clamping levers (A)** on both door hinges **fully**.

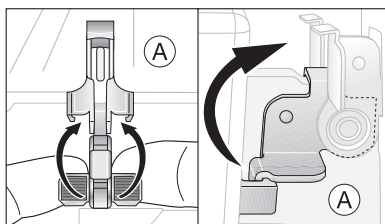

3. Close the oven door as far as the first position (approx. 45°).

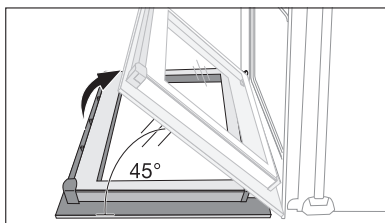

4. Take hold of the oven door with a hand on each side and pull it away from the oven at an upwards angle (**Take care:** It is heavy).

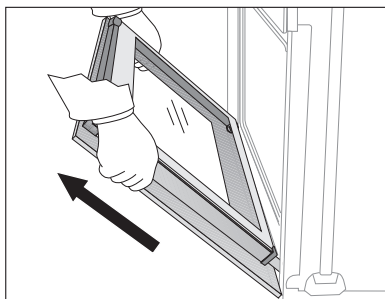


Lay the oven door with the outer side facing downwards on something soft and level, for example, a blanket in order to prevent scratches.

Hanging the oven door back on its hinges


1. From the handle side take hold of the oven door with a hand on each side and hold at an angle of approx. 45°.

Position the recesses on the bottom of the oven door on the hinges on the oven.



Let the door slide down as far as it will go.

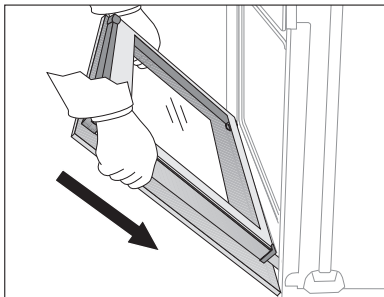

2. Open the oven door as far as it will go.

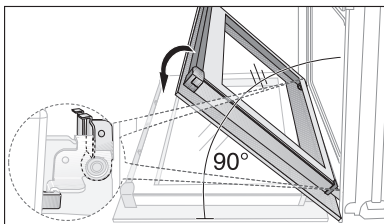

3. Fold up the clamping levers (A) on both door hinges back into their original positions.

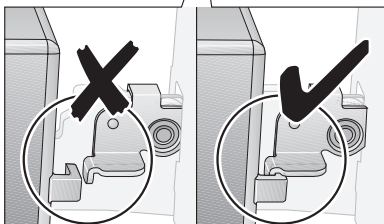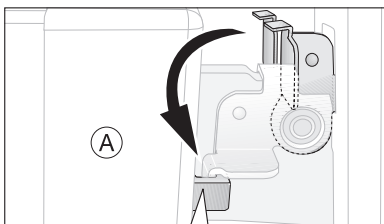

4. Close the oven door.

Oven door glass


The oven door is fitted with three panels of glass mounted one behind the other. The inner panels can be removed for cleaning.




Important! Rough handling, especially around the edges of the front panel, can cause the glass to break.

Removing the door glass panels


1. Open the oven door as far as it will go.

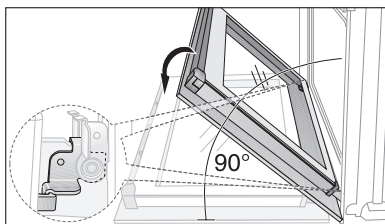


2. Undo the **clamping levers (A)** on both door hinges fully

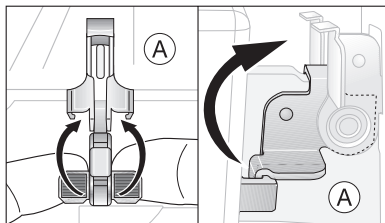


3. Close the oven door as far as the first position (approx. 45°).

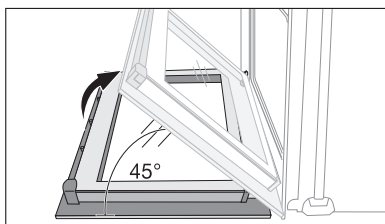

4. Take hold of the door trim (B) on the upper edge of the door at both sides and press inwards to release the clip seal. Then remove the door trim by pulling it upwards.

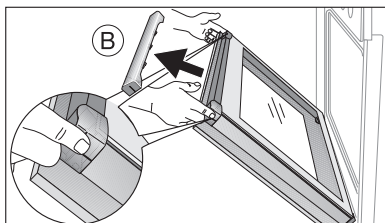

5. Take hold of the door glass panels on their upper edge one after the other and take them out of the guide by pulling them upwards..

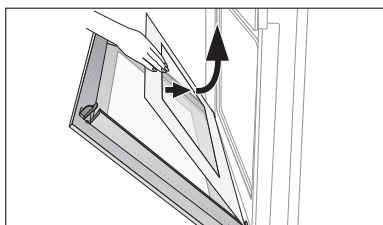


Cleaning the door glass panels

Clean the door glass panels thoroughly with a solution of water and washing up liquid. Then dry them carefully


Putting the door glass panels back.

1. From above insert the door glass panels at an angle into the door profile at the bottom edge of the door one after the other and lower them.

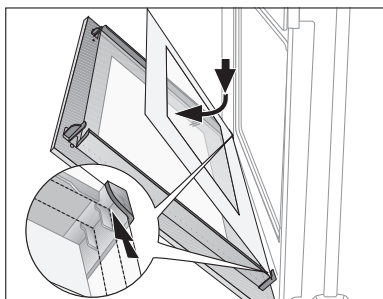



Insert the smaller panel first, then the larger panel.

2. Take hold of the door trim (B) at each side, position it on the inside edge of the door and plug the door trim (B) into the upper edge of the door

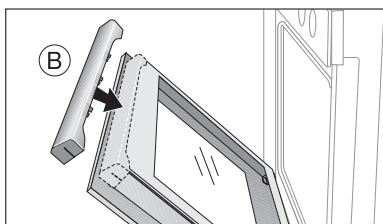






On the open side of the door trim (B) there is a guide bar (C). This must be pushed **between** the outer door panel and the guide corner (D). The clip seal (E) must be snapped in.

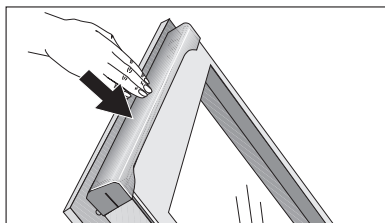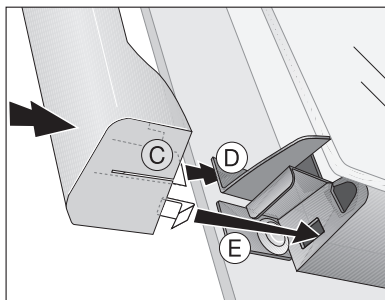

3. Open the oven door as far as it will go

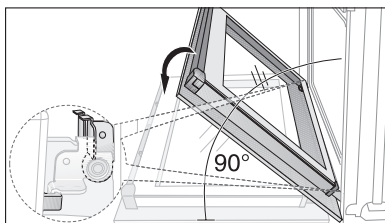

4. Fold up the clamping levers (A) on both door hinges back into their original positions

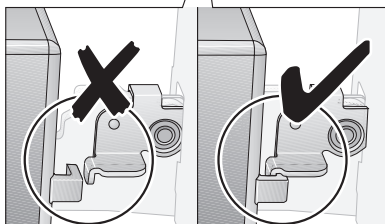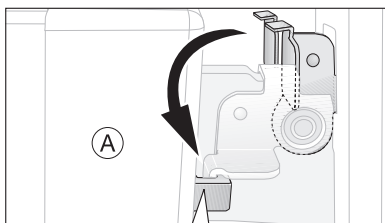

5. Close the oven door.

What to do if ...

Fault	Possible cause	Remedy
The oven does not heat.	The oven has not been switched on.	Switch the oven on.
	The required settings have not been made.	Check the settings.
	The domestic electrical protection device (fuse) has been tripped.	Check the fuses or protection devices. If these are tripped repeatedly, you should call a qualified electrician.
The oven light does not come on.	The bulb has blown.	Replace the bulb.

If you are unable to remedy the problem by following the above suggestions, please contact your dealer or the Customer Care Department.



Warning! Repairs to the appliance are only to be carried out by qualified service engineers. Considerable danger to the user may result from improper repairs.



If the appliance has been wrongly operated, the visit from the customer service technician or dealer may not take place free of charge, even during the warranty period.



Advice on cookers with metal fronts:

Because of the cold surface at the front of the cooker, opening the oven door during (or just after) baking or roasting may cause the glass to steam up.

Technical Data

Oven Interior Dimensions

Height x Width x Depth	31,0 cm x 40,5 cm x 41,0 cm
Capacity (usable capacity)	51 l

Regulations, Standards, Directives

This appliance meets the following standards:

- IEC 60 335-1 and IEC 60 335-2-6
relating to the safety of electric appliances for household use and similar purposes and
- IEC 60350
relating to the operating features of household electric cookers.

Voltage of mains supply	208V	240V
Oven mode:		
Hot Air		
Rated Power		
Measured Power	1680 Watt	2250 Watt
Temperature rise	155 K	155 K
Oven mode:		
Top Bottom		
Rated Power		
Measured Power	1630 Watt	2200 Watt
Temperature rise	180 K	180 K

Installation Instructions




Attention: The new appliance may only be installed and connected by a **registered expert**.

Please comply with this. If you do not, any damage resulting is not covered by the warranty.





Safety information for the installer

- The electrical installation is to be set up so that the appliance can be isolated from the mains with a minimum 3mm all-pole contact separation.
Suitable separation devices include e.g. cut-outs, fuses (screw fuses are to be taken out of the holder), RCD's and contactors.
- Anti-shock protection must be provided by the installation.
- The built-in unit must meet the stability requirements of DIN 68930.

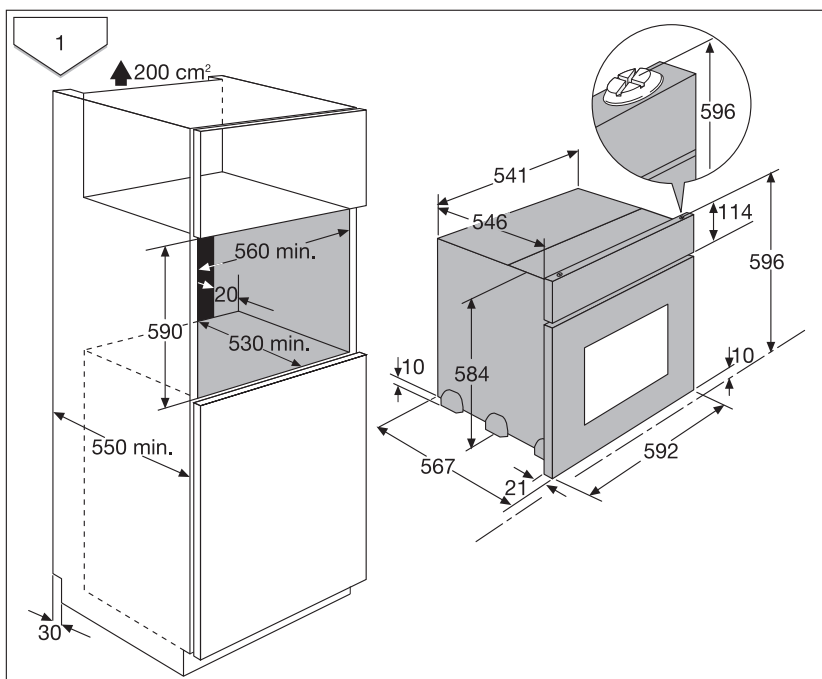

Connect the Armour Cable into the junction box, and connect the wires according to National and Local electrical codes.

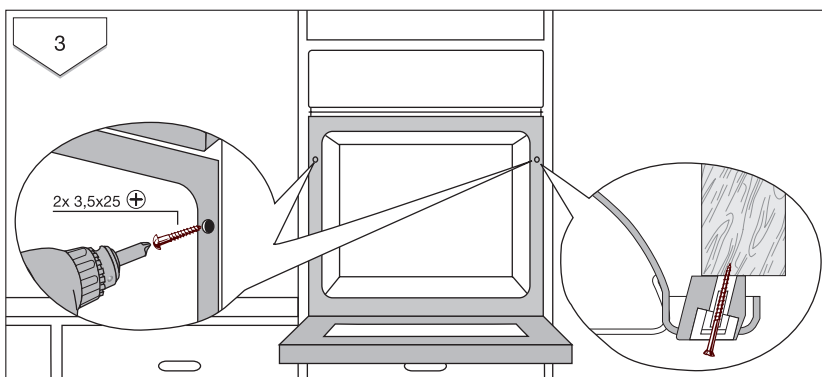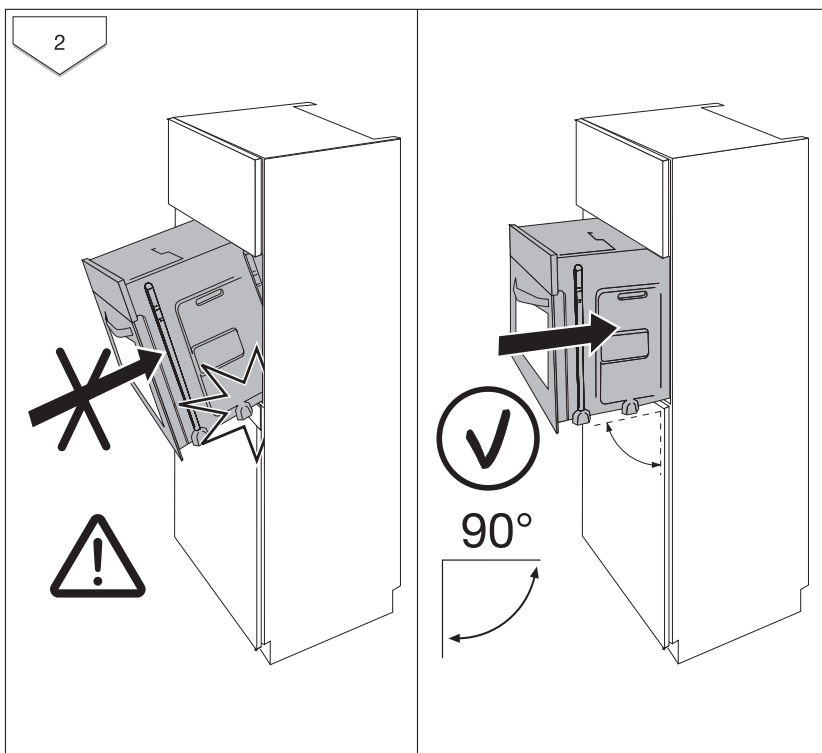

Guarantee/Customer Service

EURO-LINE APPLIANCES

LENGTH OF WARRANTY:

TWO YEAR FULL WARRANTY

from original date of purchase, including parts and labour, to the first purchaser of this appliance

EURO-LINE WILL PAY FOR:

Replacement parts and/or labour to repair defects in materials or workmanship. Service must be provided by an authorized Euro-Line company (unless advised otherwise).

THIS GUARANTEE DOES NOT COVER COMMERCIAL USE.

The name Euro-Line Appliances, for service matters, incorporates work performed by authorized service agents or service companies.

EXCEPTIONS:

EURO-LINE APPLIANCES WILL NOT PAY FOR THE FOLLOWING SERVICE CALLS:

1. To install or correct the installation of an appliance
2. To instruct the use of an appliance.
3. To replace house fuses, re-set circuit breakers or correct house wiring.
4. To correct house plumbing.
5. To clean drains, filters or garbage disposers.
6. To repair an appliance if it fails due to misuse or abuse.

EURO-LINE APPLIANCES WILL NOT PAY WHEN THE FOLLOWING OCCURS:

1. Damage resulting from fires, acts of God, alteration, improper installation, or installation not in accordance with local building codes.
2. Pickup or delivery of major appliances requiring service. The appliances are designed to be repaired in the home. However, Euro-Line will not be responsible for travelling and labour costs if the customer lives in excess of 50 km/30 miles, or if the travel time is in excess of 30 minutes from the nearest service center. Any excess to this will not be covered by the warranty.

In no event, will Euro-Line be responsible for incidental or consequential damages. For warranty service and parts, contact **EURO-PARTS**. Service will be provided during normal business hours. Should you have a service problem that is not resolved locally, contact:

For Service and Parts Contact:

EURO-PARTS, USA

Tel: 1-800-561-4614

Fax: 1-519-528-5001

EURO-PARTS, CANADA

Tel: 1-800-678-8352

Fax: 1-519-528 5001

EURO-LINE APPLIANCES

1-800-421-6332

Tel. Direct: 1-905-829-3980

Fax: 1-905-829-3985

User Instructions & Installation Manual

Service & Repair

To save you time and money please have the following information ready in case you have to call for service:

- Name of the dealer from whom you purchased the appliance.

- Model number (shown on the rating plate)

- Serial number (shown on the rating plate)

- Date of purchase.

You should also retain the original purchase receipt to support any claim made under the warranty. (We suggest you staple the receipt to this page).

If service is required, contact the Service Center:

EURO-PARTS, CANADA

Tel: 1 800 678 8352

Fax: 1-519-528-500

EURO-PARTS, USA

Tel: 1-800-561-4614

Fax: 1-519-528-5001

DISTRIBUTED BY:

EURO-LINE APPLIANCES

2150 WINSTON PARK DRIVE, UNIT #20

OAKVILLE, ONTARIO

CANADA L6H 5V1

1-800-421-6332

Tel: 905-829-3980

Fax: 905-829-3985

www.euro-line-appliances.com


Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions (section "What to do if...").

If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners.

In order to be able to assist you quickly, we require the following information:

- Model description
- Product number (PNC)
- Serial number (S No.)
(for numbers see rating plate)
- Type of fault
- Any error messages displayed by the appliance

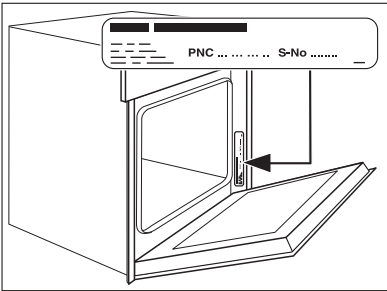

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description:

PNC:

S No:

www.electrolux.com